


MALONE[®]


CHANGING THE WAY YOU GET THERE

Deluxe Kayak Kit

SOFT RACK KAYAK CARRIER

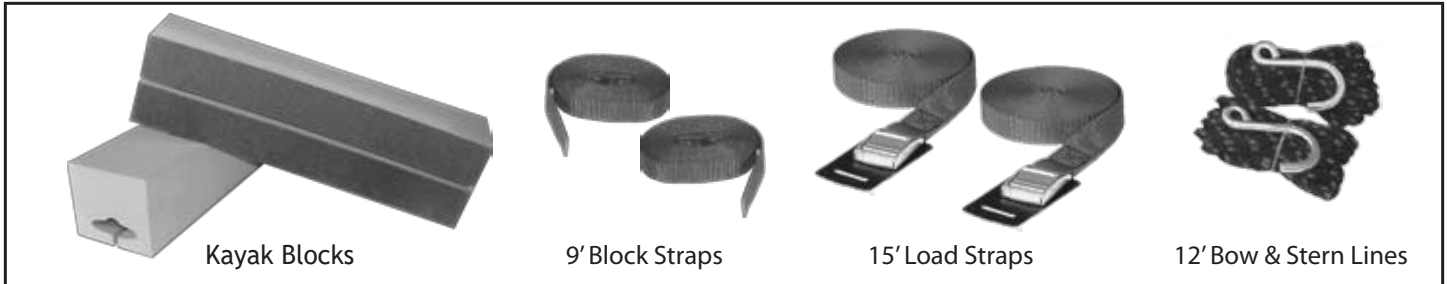


Installation & Loading Instructions - Please Read Before Beginning

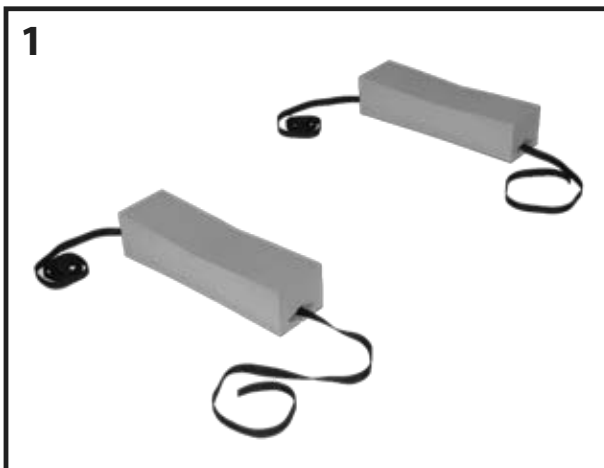

Step 1: Attaching Blocks to Kayak

- Unroll the 9' Block Straps. Thread each one through the cut-out in the bottom of each Block. For installation without cross bars, the Blocks should be placed so that they are spaced apart 1/3 of the total length of the kayak. For installation with cross bars, the Blocks should be spaced apart the same distance as the distance between the front and rear cross bars. See image 1.

- Place the kayak onto the Blocks so that it is aligned and the weight of the kayak is evenly distributed on each Block. See image 2.

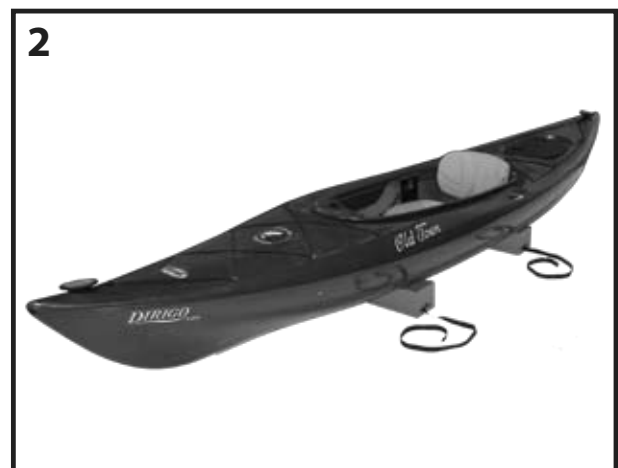

- Tighten the two Block Straps so that kayak and Blocks are firmly cinched together. See image 3.

MALONE[®]

CHANGING THE WAY YOU GET THERE

Installation & Loading Instructions - MPG152 Deluxe Kayak Kit

Step 2: Loading the Kayak



- Confirm that the bottom of the Blocks and the roof of the vehicle are clean and free of any dust or dirt that could scratch the finish.

Place the kayak with Blocks onto the vehicle. For installation without cross bars, center the kayak on the roof and confirm that the weight is evenly distributed. See image 4.

Note: Do not place Blocks on sun roof.

For installation with cross bars, the Blocks should be fitted onto the cross bars with the bottom cut-outs fully inserted over each bar.

- Unroll the green 15' Load Straps. Open the vehicle's doors. Throw the non-buckle ends of each Strap up and over the kayak and down to the other side of the vehicle. The Straps and the Blocks should be as closely aligned as possible. See image 5.



- With the doors open, pull both ends of the straps together and buckle from the inside of the vehicle. Confirm the straps are tight and secure. See image 6.

MALONE[®]

CHANGING THE WAY YOU GET THERE

Installation & Loading Instructions - MPG152 Deluxe Kayak Kit



- Install the bow and stern safety tie-downs per the attached instructions.

NOTE: Bow and stern safety tie-downs are required for all Malone rooftop transport(s). Failure to correctly install and use safety tie-down lines voids all warranty and liability.

Always check mounting hardware, load straps and safety tie-down lines for proper and secure attachment before transport. Use of this product for any other application other than kayak transport voids warranty.

Limit transport distance to 250 miles or less. Warning, this product is not to be used as a flotation device.

Proudly Made In The USA

Warning: All vehicular rooftop transports are potentially hazardous. Any person using MALONE automotive transport systems is personally responsible for following the given directions for use and installation and accepts full and complete responsibility for any and all damages or injury of any kind including death, which may result from their use.

MALONE AUTO RACKS 81 County Rd. Ste 1, Westbrook, ME 04092
P: 207.774.9100 F: 207.615.0551
E: support@maloneautoracks.com W: www.maloneautoracks.com

MALONE[®]


CHANGING THE WAY YOU GET THERE




MPG306 BOW & STERN LINE KIT

NOTE: NOT REQUIRED ON TRAILER PACKAGES


Attach hook to rope (steps A-D)

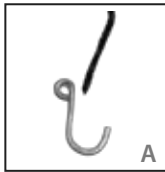

Thread free end of cord through hook.

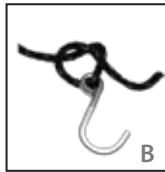

Create a "left over right" knot & tighten.

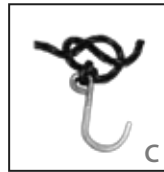

Create a "right over left" knot & tighten.



Pull to test for knot strength.


Attach and dress rope to vehicle and boat (steps E-O)




Attach S-hook to vehicle tow ring or other sturdy body part.




Keeping the rope tight and S-hook in place, thread the free end up and through a strong point on the kayak

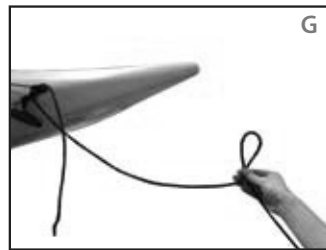


Make a loop in the rope 12" to 14" away from the kayak or canoe.

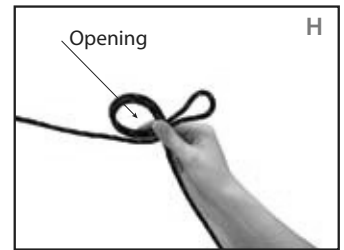

Bend the loop over leaving a large opening as shown.

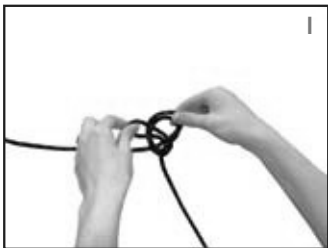

Pass the loop through the opening.

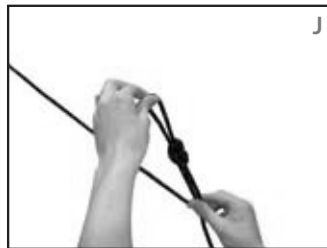

Pull to create a tight knot.



Thread the free end of the rope through the loop.



Pull the free end up until the rope is sufficiently tight.



Hold the rope secure with one hand.



Form a knot with the free end and tighten. Form a second knot for safety purposes.



The line should be tight and secure. Repeat for second tie-down.

MALONE AUTO RACKS 81 County Rd. Ste 1, Westbrook, ME 04092

P: 207.774.9100 F: 207.615.0551

E: support@maloneautoracks.com W: www.maloneautoracks.com

MALONE

CHANGING THE WAY YOU GET THERE

Limited One (1) Year Warranty

The Malone Auto Racks (Malone) Limited 1 Year Warranty covers certain Malone-brand products that have been specifically identified for inclusion in the program. This warranty is in effect for one (1) year, from the time of sale, for the original retail purchaser of the product. This warranty is terminated if the original retail purchaser sells or otherwise transfers the product to any other person or entity.

Subject to the limitations and exclusions described in this warranty, Malone will remedy defects in materials and/or workmanship by repairing or replacing, at its option, a defective product without charge for parts or labor. Malone may elect, at its option, not to repair or replace a defective product but rather issue to the original retail purchaser a refund equal to the purchase price paid for the product, or credit to be used toward the purchase of a replacement Malone product.

This warranty does not cover, and no warranty is given for defects or problems caused by normal wear and tear, which includes, but is not limited to, surface (aesthetic) metal corrosion, scratches, dents, deformities, accidents, unlawful vehicle operation, or any modification of a product not performed or authorized in writing by Malone.

In addition, this warranty does not cover problems resulting from conditions beyond Malone's control including, but not limited to, theft, misuse, overloading, or failure to assemble, mount or use the product in accordance with Malone's written instructions or guidelines included with the product provided to the original retail purchaser.

No warranty is given for Malone products purchased outside of the continental United States, Canada and Mexico.

If the product is believed to be defective, the original retail purchaser should contact the Malone dealer from whom it was purchased, who will give the original retail purchaser instructions on how to proceed. If the original retail purchaser is unable to contact the Malone dealer, or the dealer is not able to remedy the defect, the original retail purchaser should contact Malone by email at support@maloneautoracks.com.

In the event that the product must be returned to Malone, a technician at the email address above will provide the original purchaser with return shipping instructions. The original purchaser will be responsible for the cost of mailing the product to Malone. In order to be eligible to receive any remedy under this warranty, a copy of the original purchase receipt, a description of the defect and a return address must be provided.

Disclaimer of Liability

Repair or replacement of a defective product, or the issue of a refund or credit (as determined by Malone) is the original retail purchaser's sole and exclusive remedy under this warranty. Damage to original purchaser's vehicle, cargo, or property, and/ or to any other person or property is not covered by this warranty.

This warranty is expressly made in lieu of any and all other warranties, express or implied, including the warranties of merchantability and fitness of a particular purpose

Malone's sole liability to any purchaser is limited to the remedy set forth above. In no event will Malone be liable for any direct, indirect, consequential, incidental, special, exemplary, or punitive damages , or, for any other damages of any kind or nature (including but not limited to, lost profits, lost income or lost sales).

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations may not be applicable.

In addition, all vehicular transports are potentially hazardous. Any person(s) using Malone products are personally responsible for following the given directions for use and/or installation and accepts full responsibility for any and all damages or injury of any kind including death, which may result from their use and/or installation.

MALONE AUTO RACKS 81 County Rd. Ste 1, Westbrook, ME 04092
P: 207.774.9100 F: 207.615.0551
E: support@maloneautoracks.com W: www.maloneautoracks.com