


MPG461GU KAYAK SADDLE INSTRUCTIONS

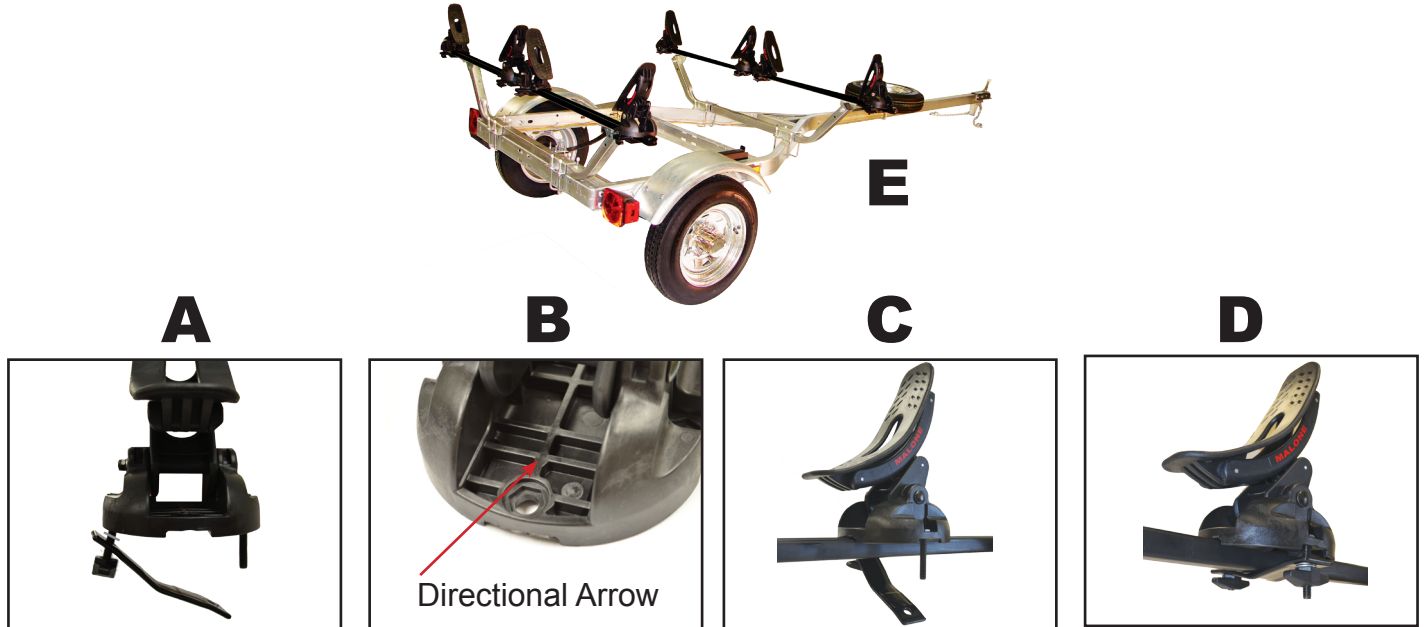

Components Included: (8) Kayak Saddles - (16) 50mm Mounting Bolts - (16) SS Washers
(16) Wing Nuts - (4) 15' Green Cam Buckle Load Straps - (4) Safety Tie-Downs

Installation Instructions:

1. From the top, install (2) 50mm Bolts into each Saddle. Insert one side of a Mounting Adapter followed by a Washer and then T-knob. (see Image A)
2. Before placing the Saddles on the cross bars, note the Directional Arrow (see Image B) located on each Saddle Base. The Saddles must be oriented with the Directional Arrow pointing towards the inside.
3. Install a Saddle by placing onto the cross bar with Mounting Adapter hanging loosely to one side. (see Image C)
4. Insert the second side of the Mounting Adapter onto the opposite 50mm Bolt. Install a Washer followed by a T-knob. Evenly tighten both T-nuts just enough so that the Saddle can be located to the final position. (see Image D)
5. Repeat instructions 3 and 4 for the seven remaining Saddles. (see Image E)
6. Place the kayaks onto the load bars, slide the Saddles inward until they capture the kayak's lower sides. Firmly tighten all of the T-knobs until the Saddles are secure on the cross rails.
7. Install the Load Straps from under the load bars on each side, and, up and over the top of each kayak.
8. For added security, install the supplied Safety Tie-Downs per attached instructions.


MALONE[®]

CHANGING THE WAY YOU GET THERE


MPG306 BOW & STERN LINE KIT



Attach hook to rope (steps A-D)

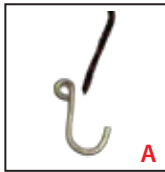


Thread free end of cord through hook.

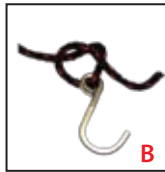

Create a "left over right" knot & tighten.



Create a "right over left" knot & tighten.

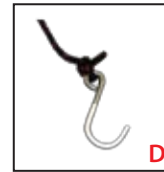

Pull to test for knot strength.

Attach and dress rope to vehicle and boat (steps E-O)



Attach S-hook to vehicle tow ring or other sturdy body part.



Keeping the rope tight and S-hook in place, thread the free end up and through a strong point on the kayak



Make a loop in the rope 12" to 14" away from the kayak or canoe.



Bend the loop over leaving a large opening as shown.



Pass the loop through the opening.



Pull to create a tight knot.



Thread the free end of the rope through the loop.




Pull the free end up until the rope is sufficiently tight.



Hold the rope secure with one hand.



Form a knot with the free end and tighten. Form a second knot for safety purposes.

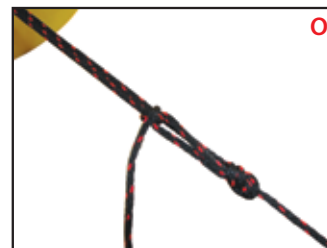

The line should be tight and secure. Repeat for second tie-down.